KOSO Feel The Speed

INSTRUCTIONS

Thank you for purchasing our product. Before installing/operating the product, read the instructions carefully and retain them for future reference.

⚠ Attention!

- For installation, follow the steps described. Any damage caused by wrong installation shall be imputed to the users.
- To avoid a short circuit from occurring do not pull or modify the wires during installation.
- Do not disassemble or change any parts. Opening and dissassembling this unit will void any warranty.
- Maintenance and repairs should be executed by our professionals only.


NOTE

⚠ Some procedures must be followed to avoid damages to the product.


⚠WARNING! Certain procedure must be followed to avoid damages to yourself, to the vehicle or to others.

1 ACCESSORIES


1 Headlight X1

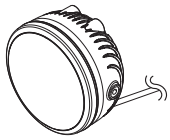

2 Terminal cover/ Bullet terminal-female X2 set

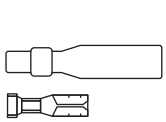

2 SPECIFICATIONS

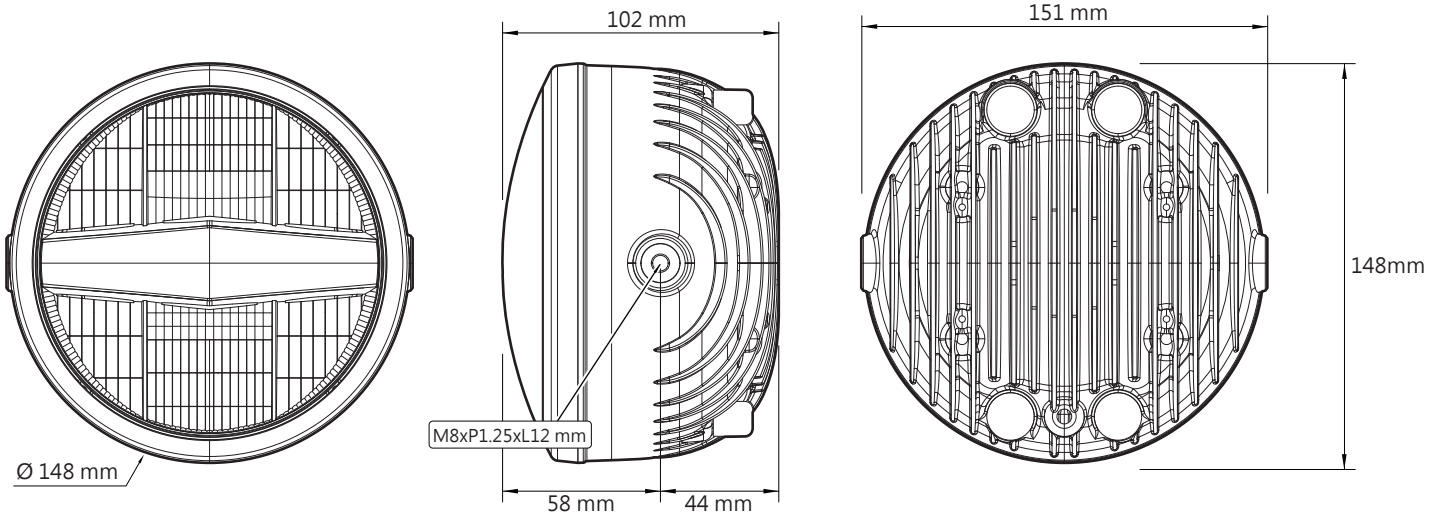


●Effective temperature range	-10 ~ 60 °C
●Standard	JIS D 0203
●Homologation	E-Mark / DOT Approved
●Size	Ø 151 X H 102 mm
●Weight	± 840 g

●Effective voltage	DC 10 ~ 16 V
○DRL	DC 12V/14.1W
○Low beam + Front Position	DC 12V/19.9W
○High beam+ Front Position	DC 12V/35.6W

NOTE Design and specifications are subject to change without notice.

3 WIRING INSTALLATION INSTRUCTIONS

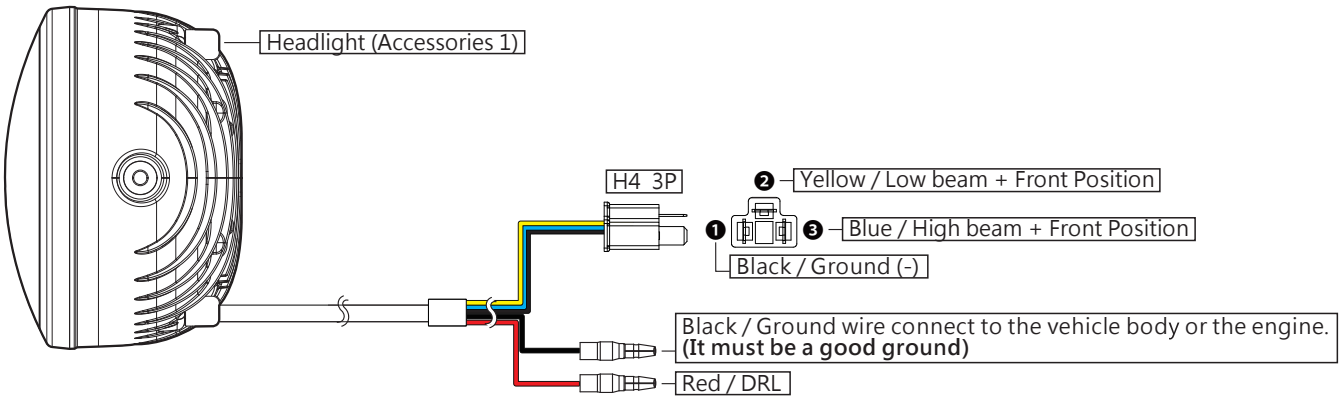

4 TROUBLESHOOTING

The following situation does not indicate malfunction of the product. Check the following before taking it in for repair.

Trouble	Check item
No LED indicator lighting up.	●Power supply cable may be disconnected. →Check if power supply cable is broken or disconnected. →Check if positive and negative poles are properly connected.

※ If the problems still cannot be solved, contact our technical department for assistance.